


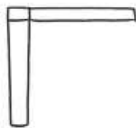



# Horn chair assembly instructions

Please read the instructions carefully before assembly.




## Remark:

1. Please confirm whether all parts of accessories complete.
2. Please be sure to assemble according to the assembly sip in the instructions.
3. Please gently screw the bolts in especially when using electric screwdriver. Over screwing will cause damage of the side frames.

## Accessories details


accessory	1 Backrest Frame	2.Side frame	3.Front frame	4.Seating stool	5 Bolt
icon					
QTY	1	2	1	1	6

accessory	6.dowel	7 angle bracket	6.Small screw		
icon					
QTY	6	4	16		

## Installation steps:

1. Take out tite dowel and install it on the backned frame, and fik the sute frams and the backrest frame with connecting screws

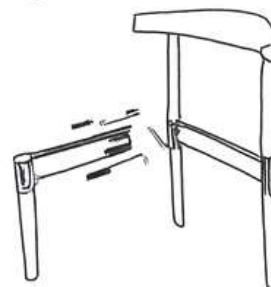

2 Install the dowel to the backrest framer connecting the side frame, and the backrest frame with the connecting screws



3 Install dowel on both sides of the front frame and then connect the side frame with from frame by using the conney-snows



4 Take out the angle bracket and fit it on the innet edge of the side frame with small screws



5 Take out the seating stort and fit it in place.

Use the smal screws at the bottom to clock the seating stool from the screw hote of the angle bracket.

