






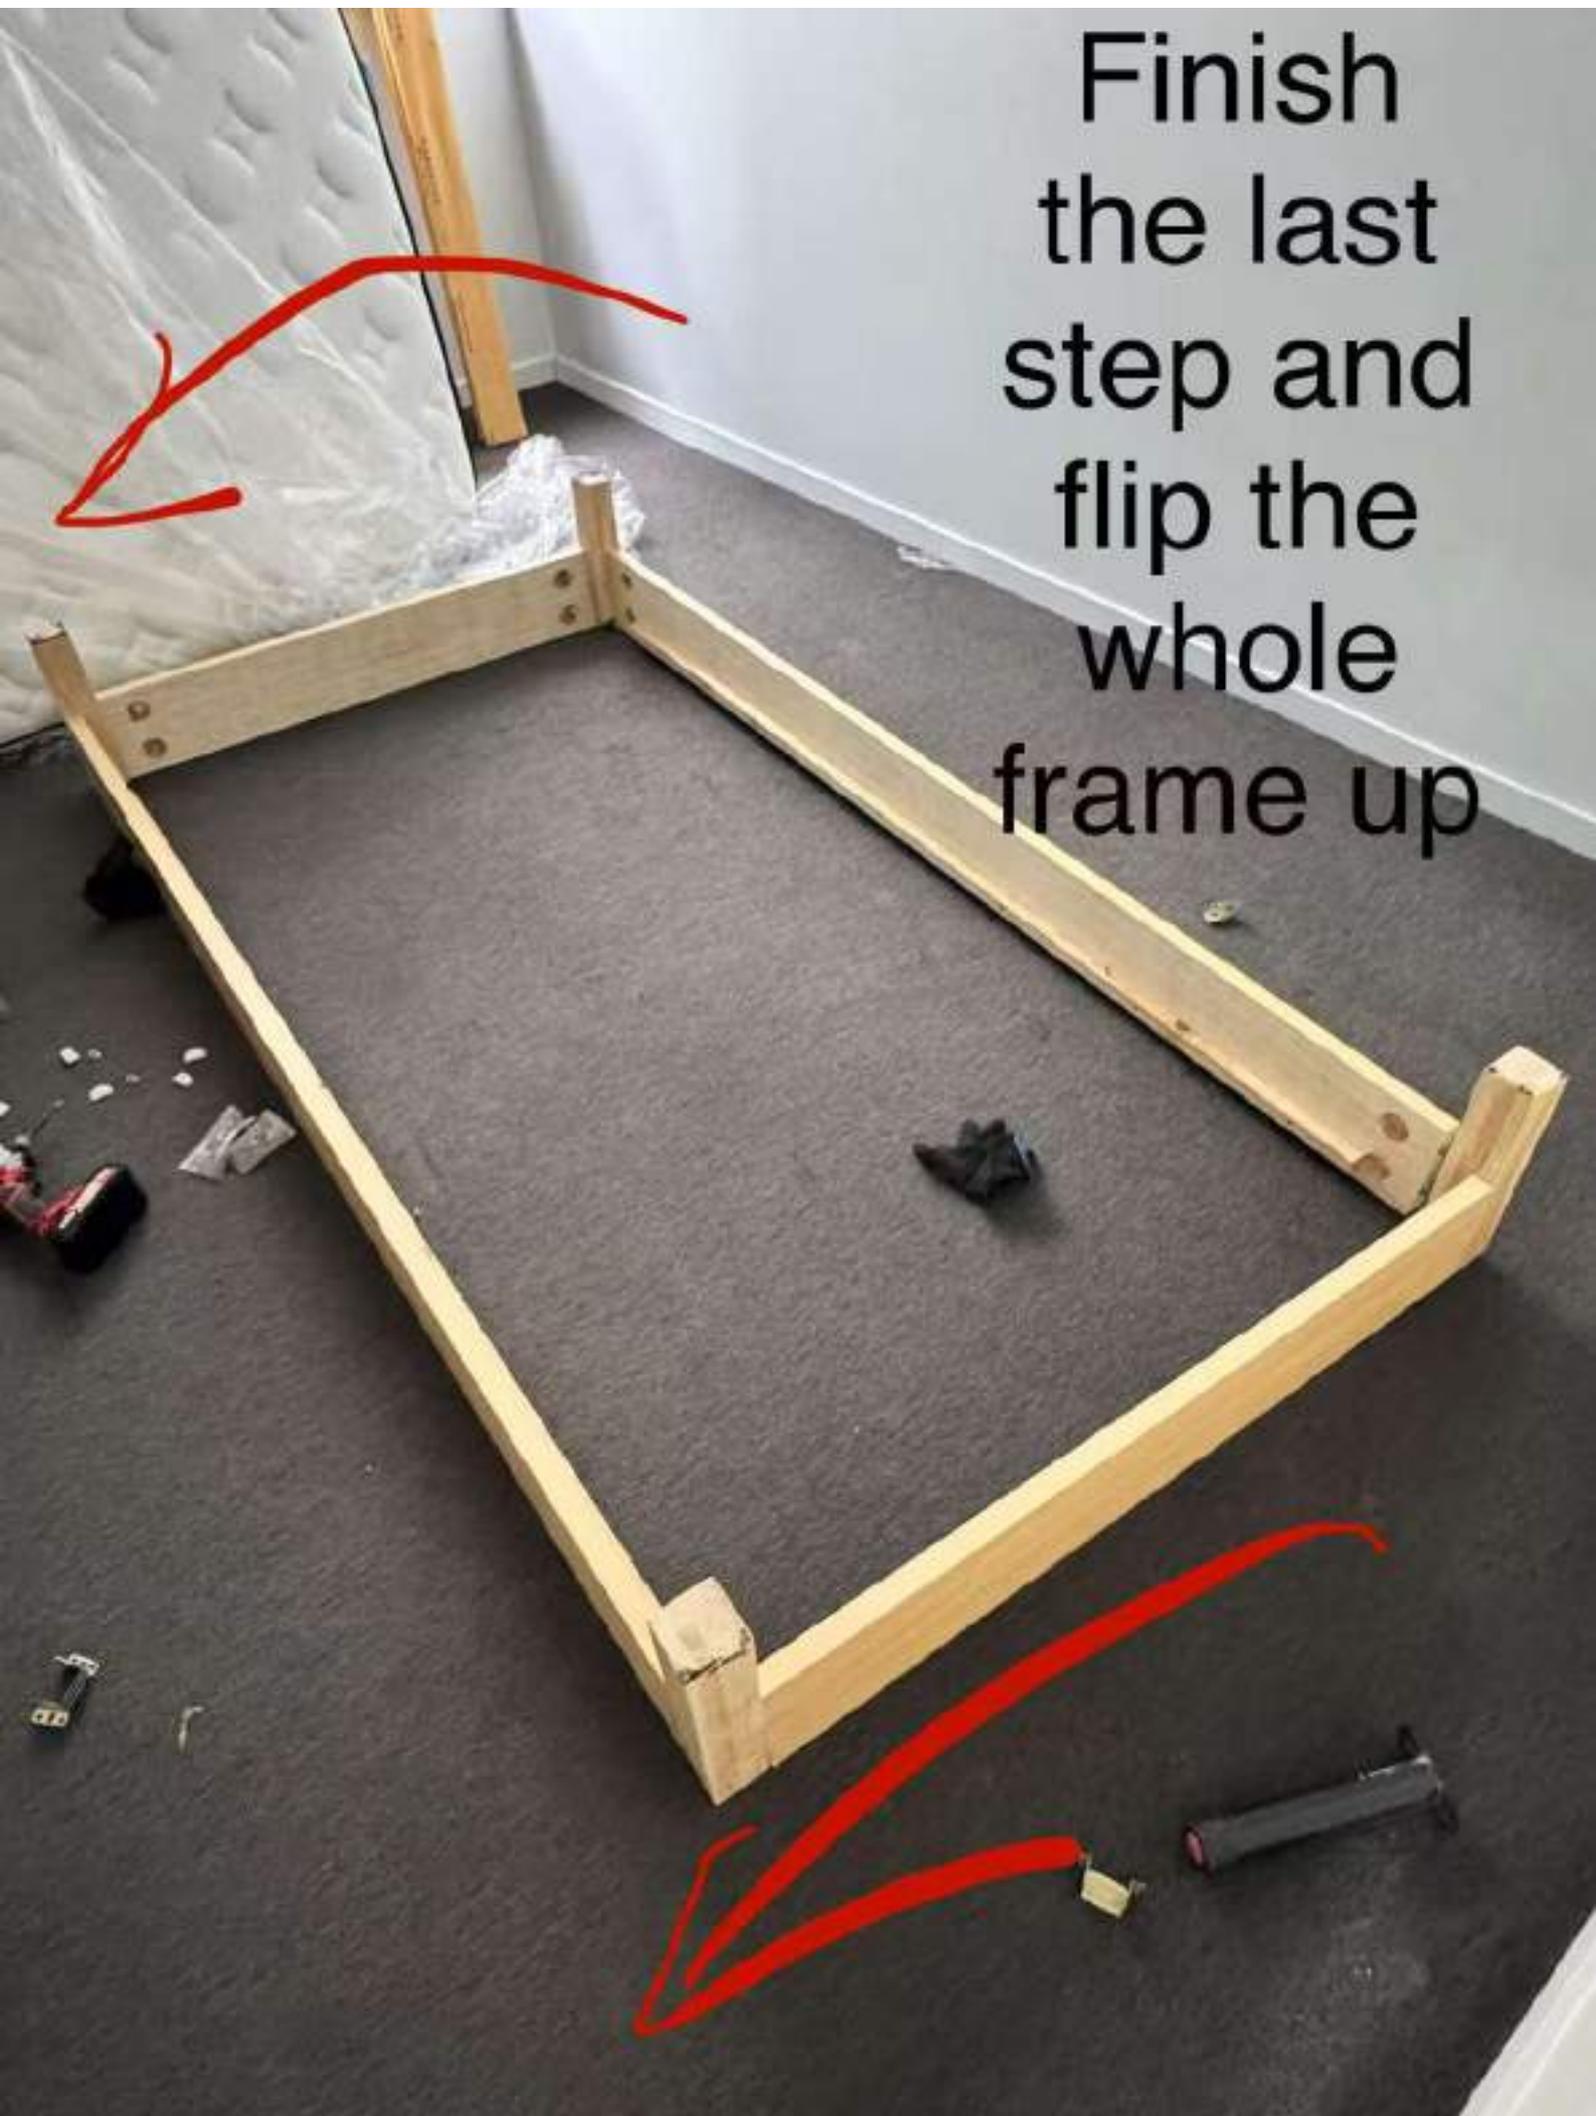

Finish  
the last  
step and  
flip the  
whole  
frame up







Adjust the  
height to  
ensure the  
lumber post  
touches the  
top slats












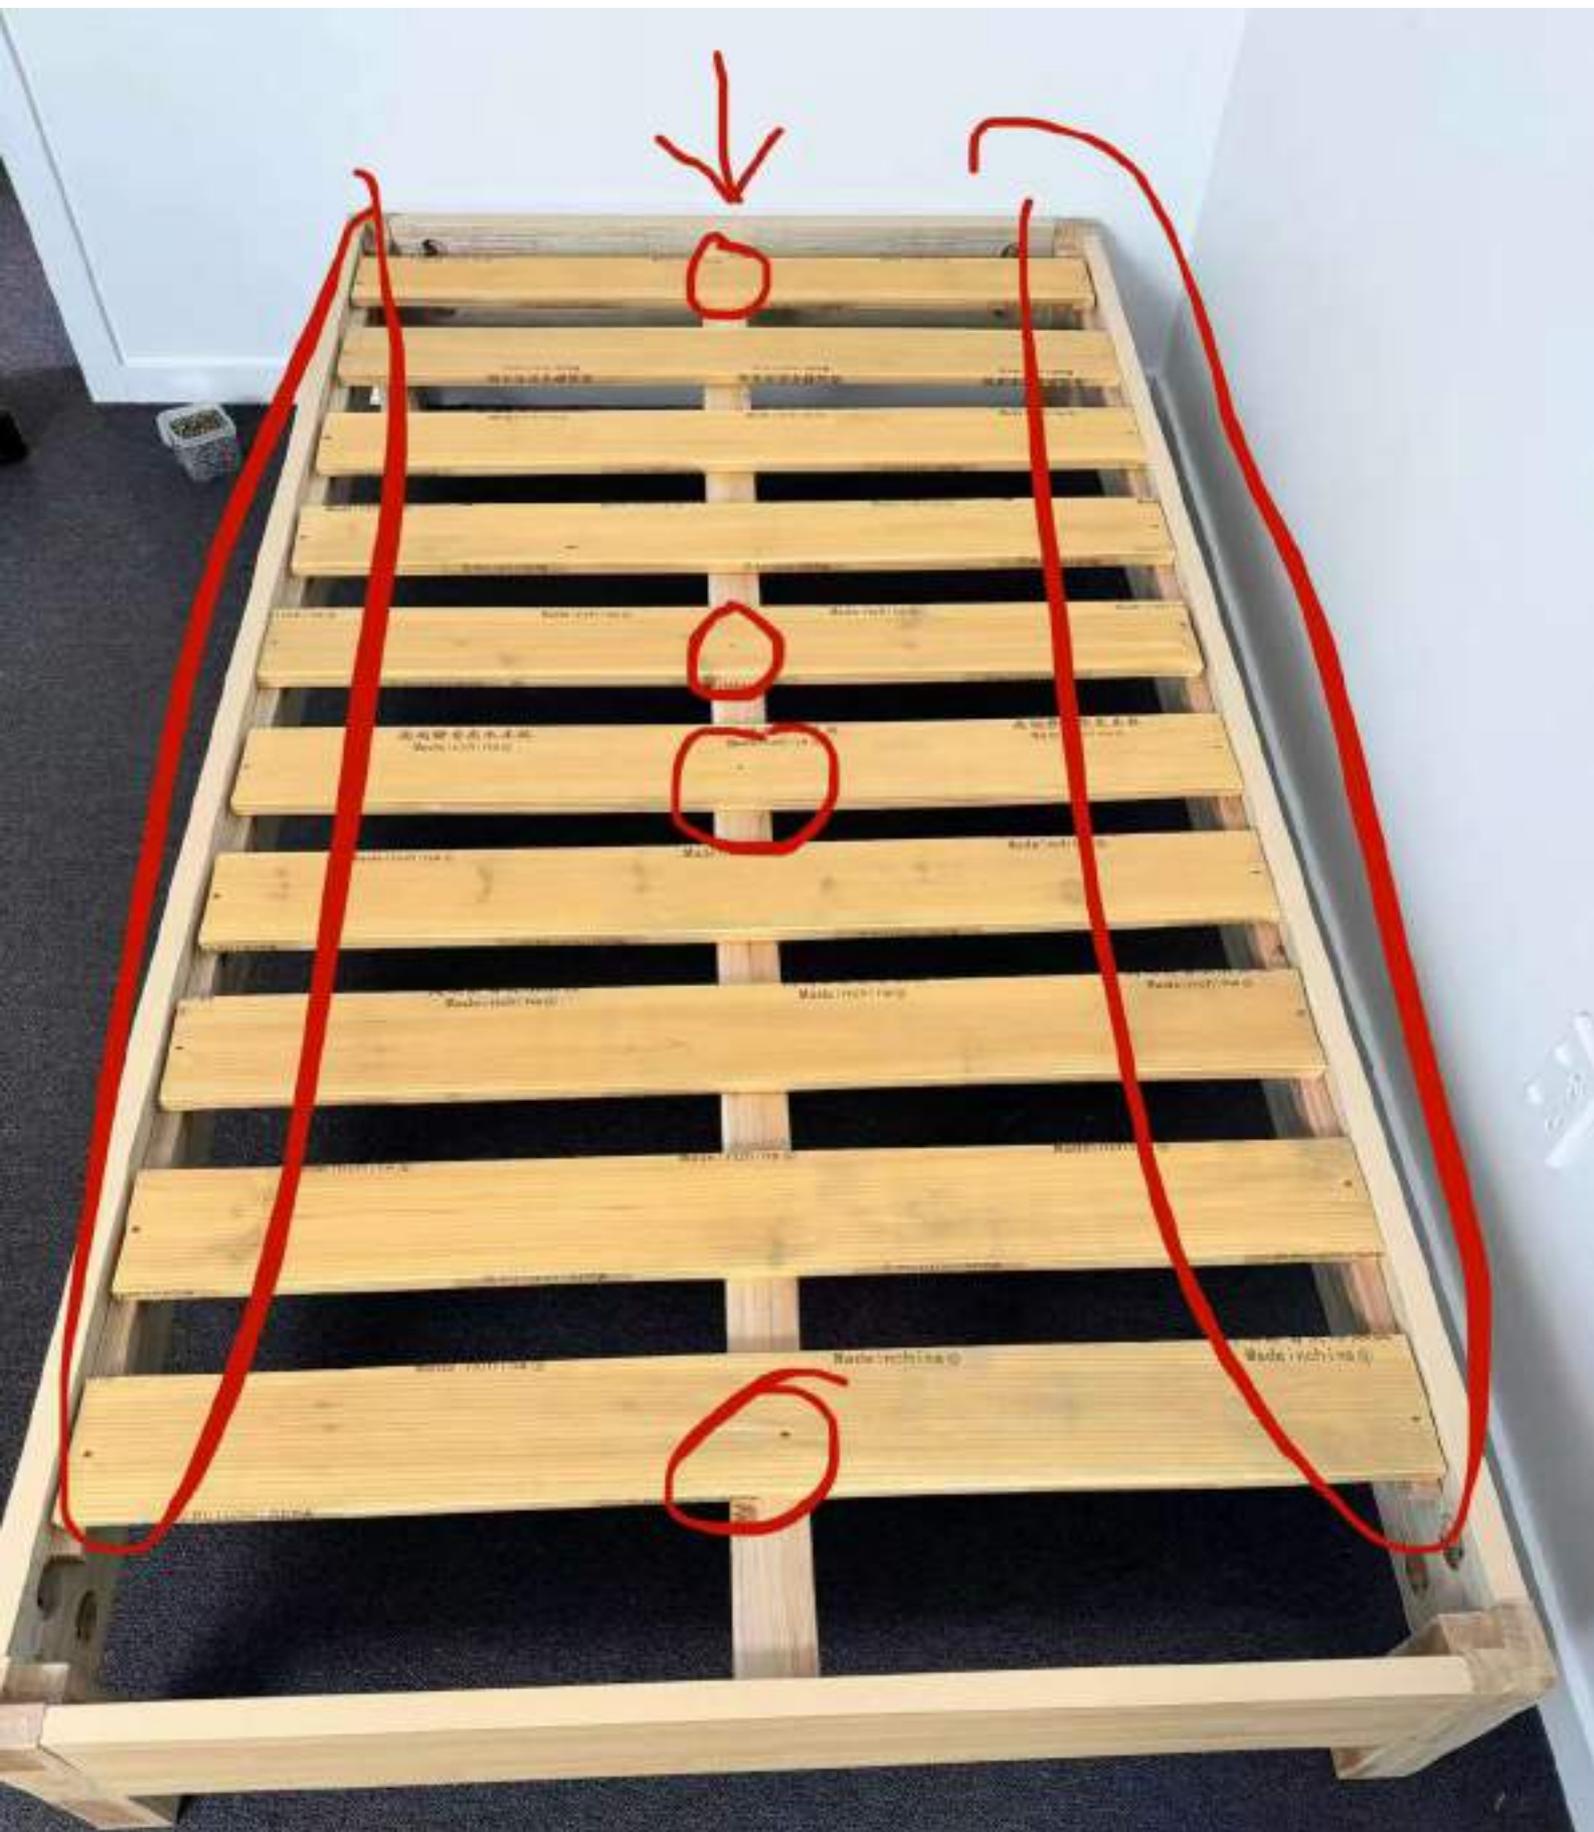

Fix all nails in the  
circled areas