

ASSEMBLY INSTRUCTION






Ax53



Bx53

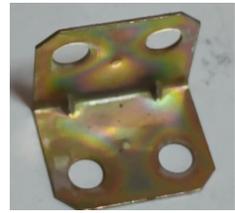

Cx2



Dx10



Ex22



Fx65



Gx65










Hx5




Jx1




Kx2

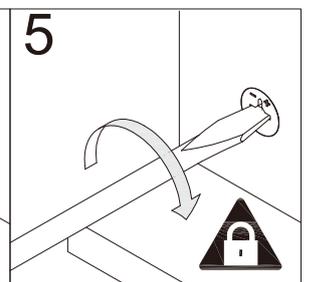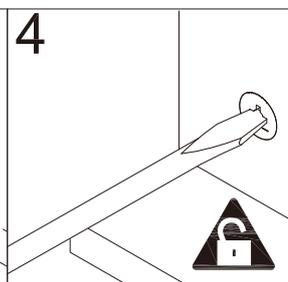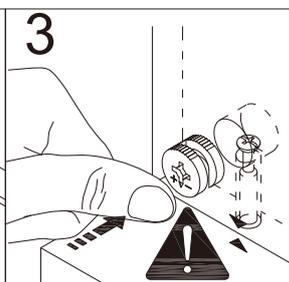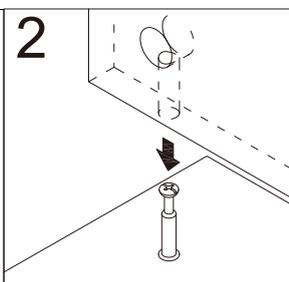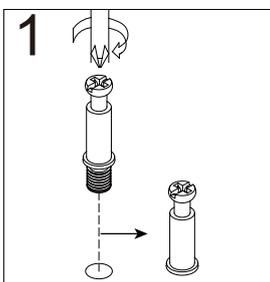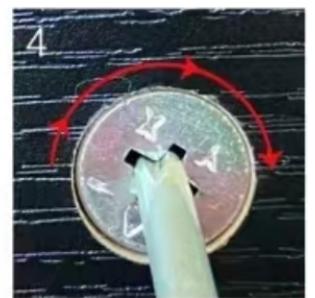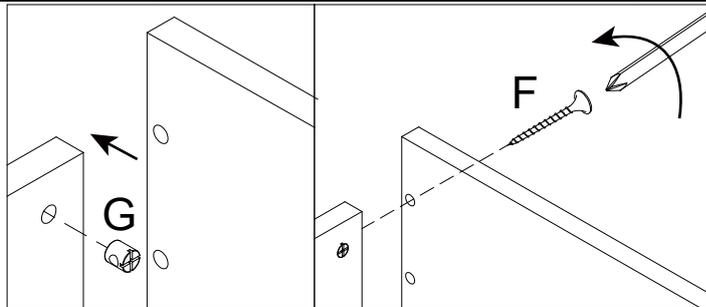

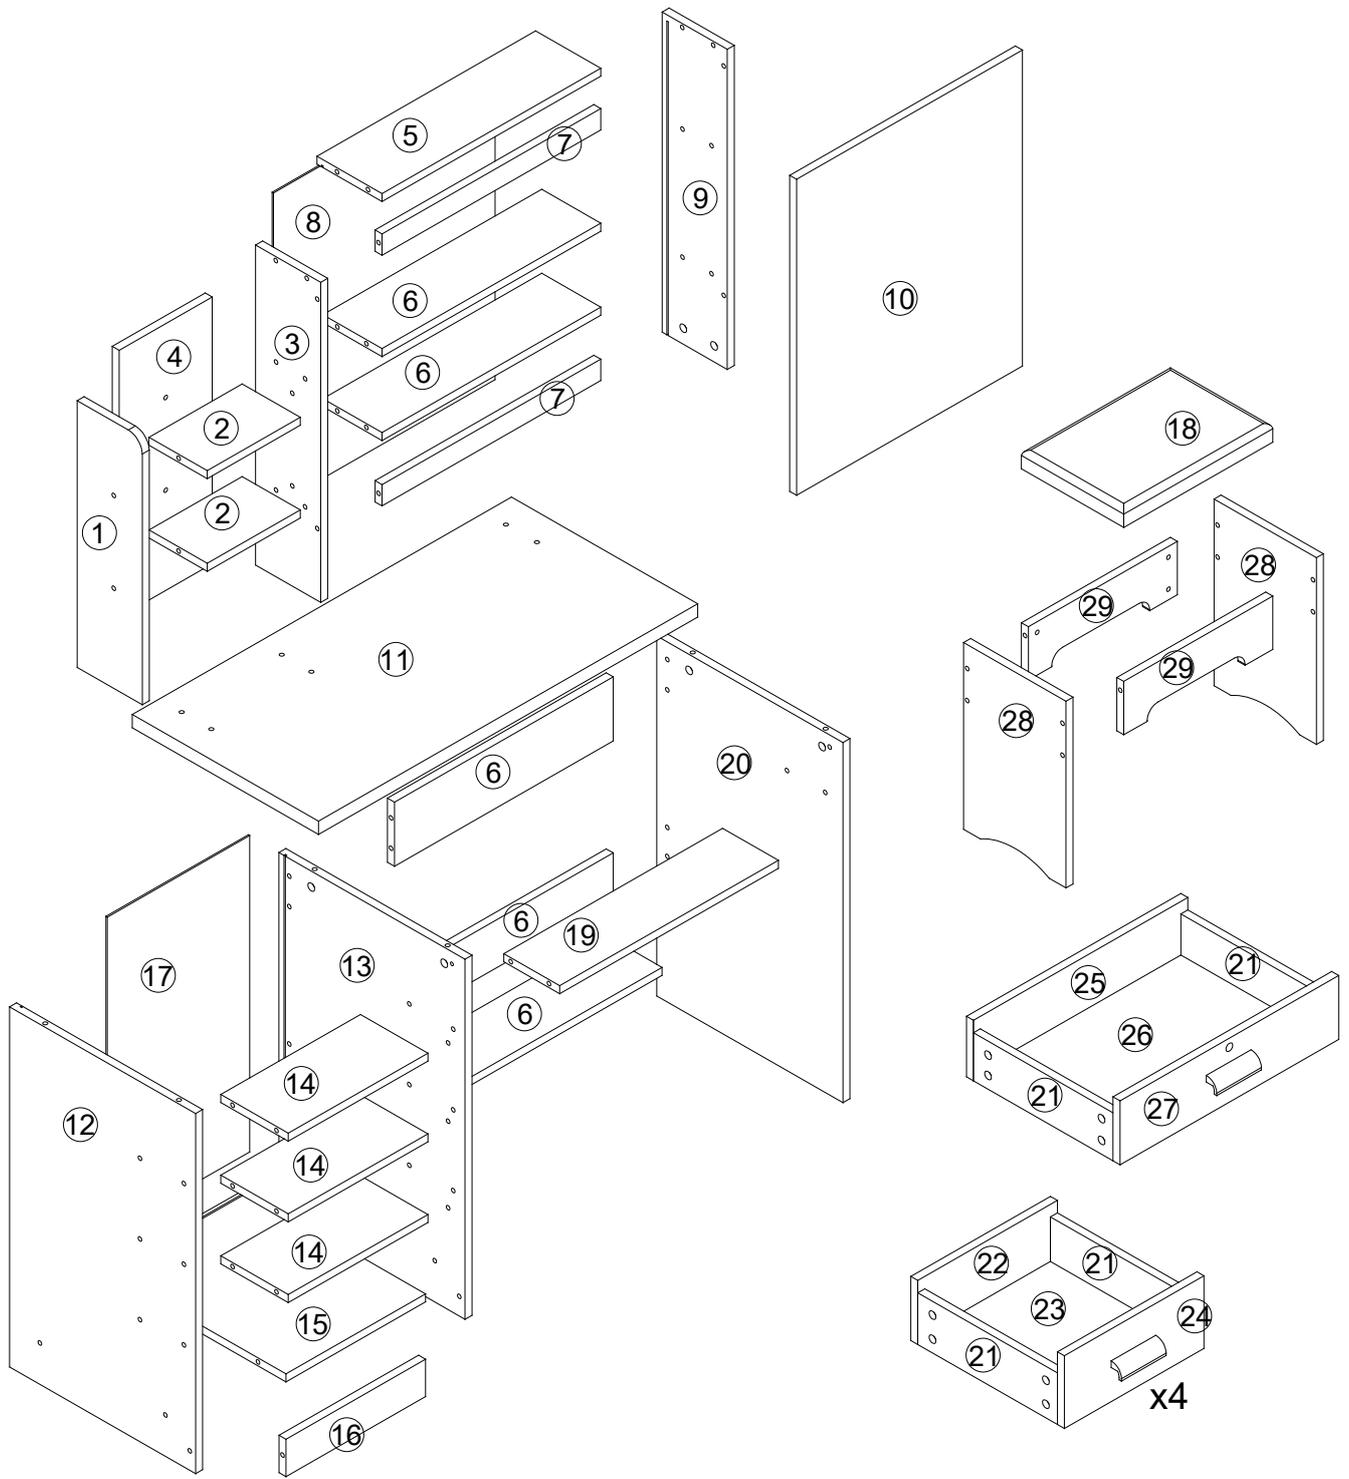


1 - x1	8 - x1	15 - x1	22 - x4	29 - x2
2 - x2	9 - x1	16 - x1	23 - x4	
3 - x1	10 - x1	17 - x1	24 - x4	
4 - x1	11 - x1	18 - x1	25 - x1	
5 - x1	12 - x1	19 - x1	26 - x1	
6 - x5	13 - x1	20 - x1	27 - x1	
7 - x2	14 - x3	21 - x10	28 - x2	


STEP 1

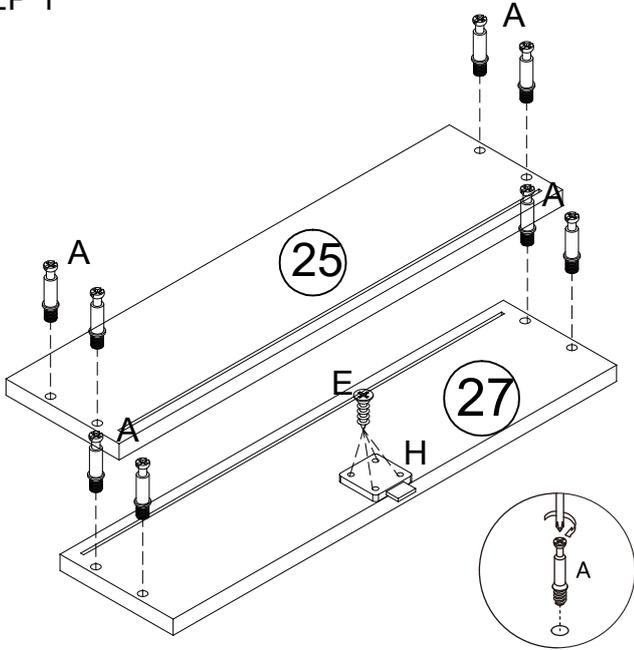


STEP 2

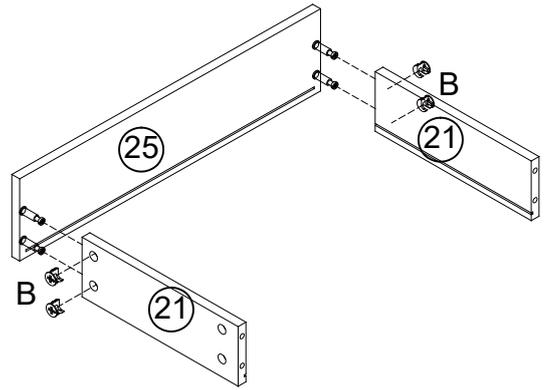

STEP 3

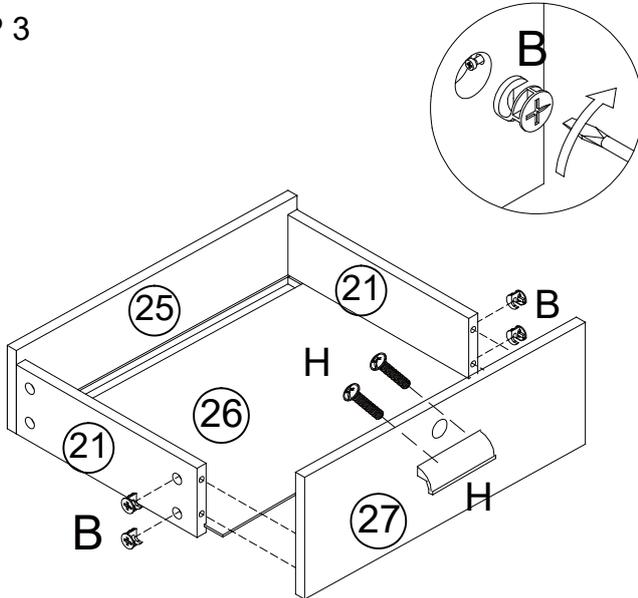


STEP 4

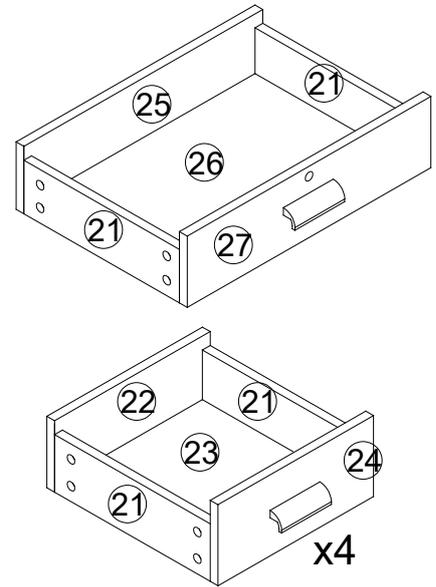


Three drawers are installed in the same way


STEP 5

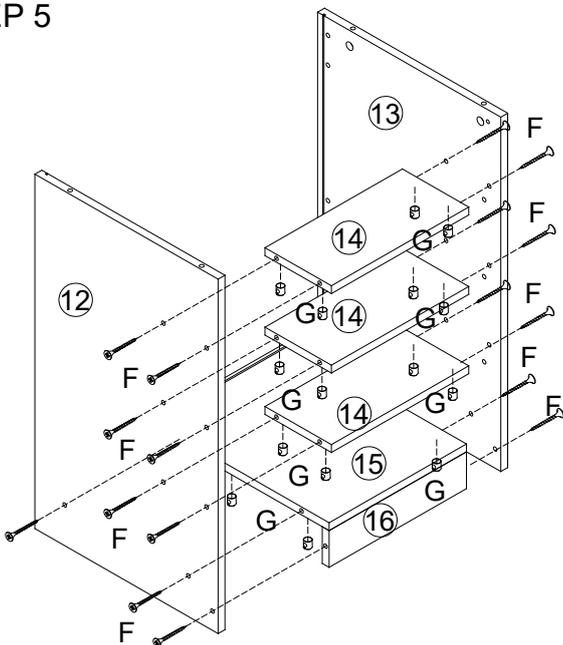


STEP 6

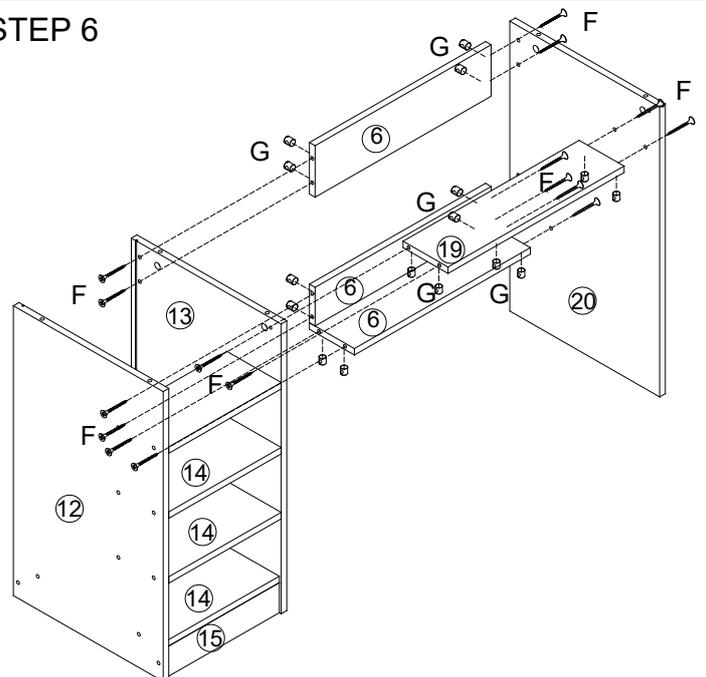


STEP 7

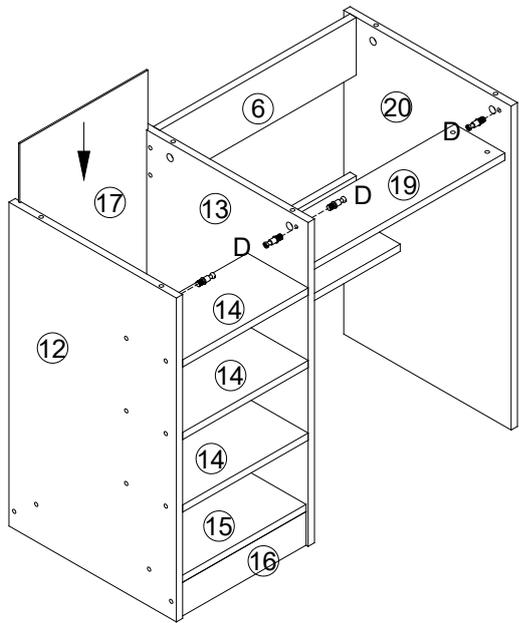


STEP 8

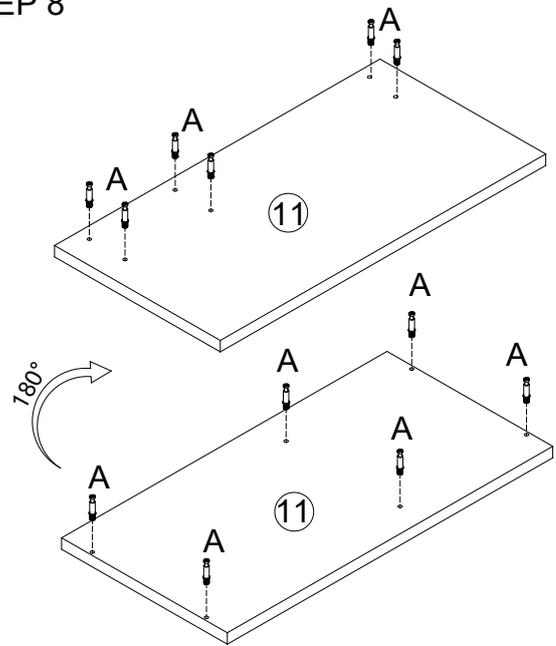


STEP 9

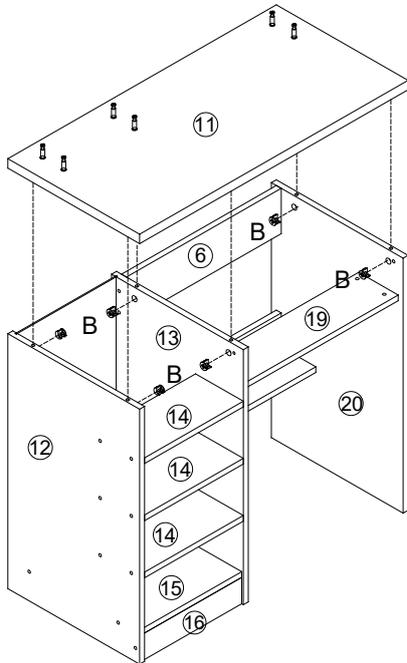


STEP 10

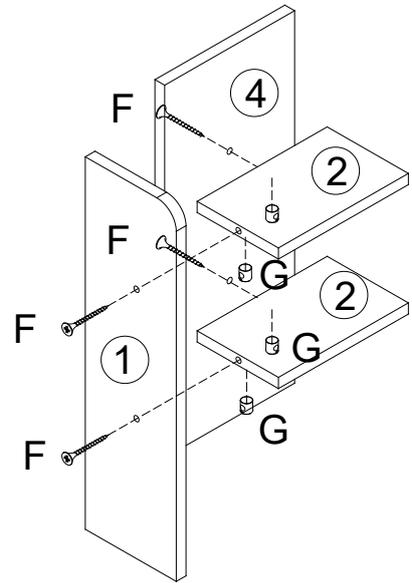


STEP 11

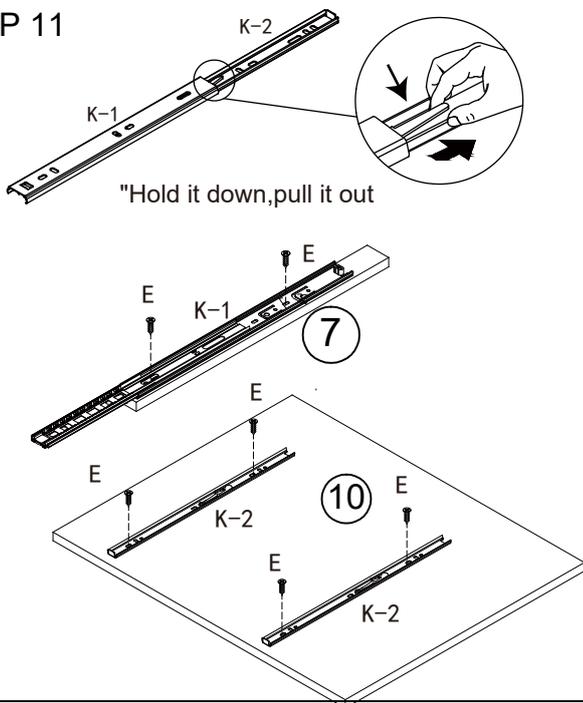


STEP 12

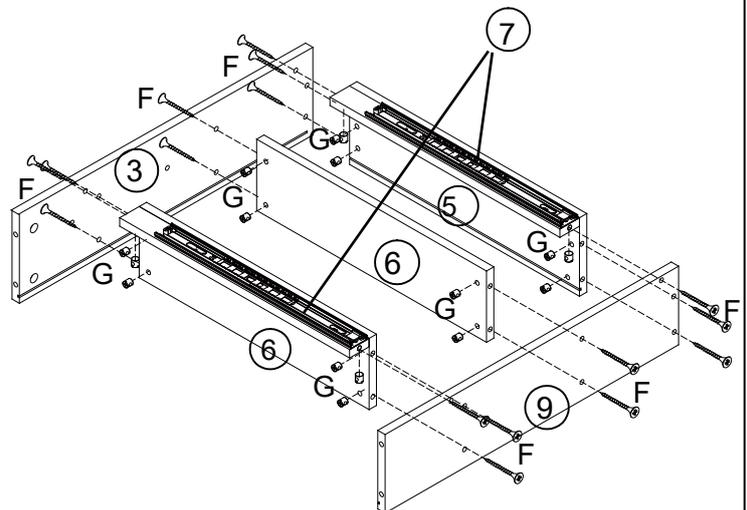


STEP 13

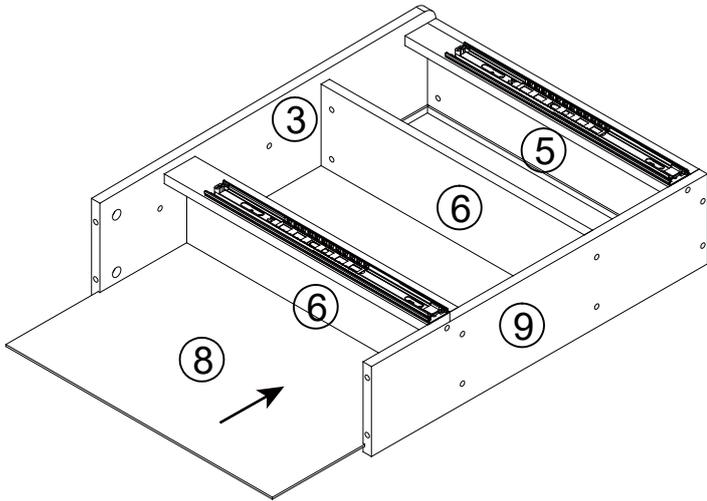


STEP 14

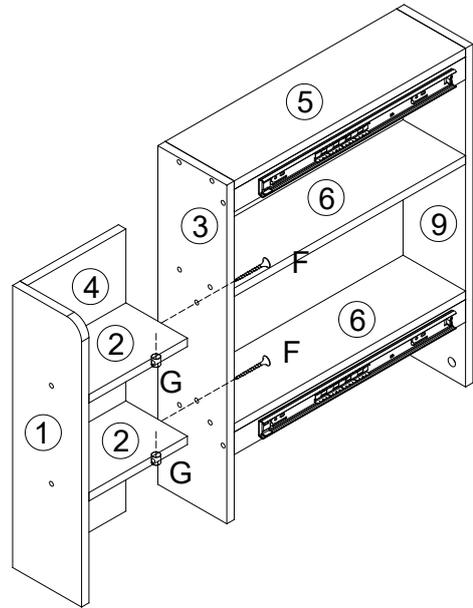


STEP 15

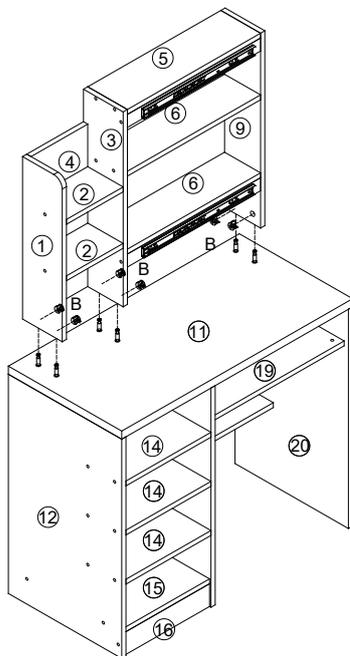


STEP 16

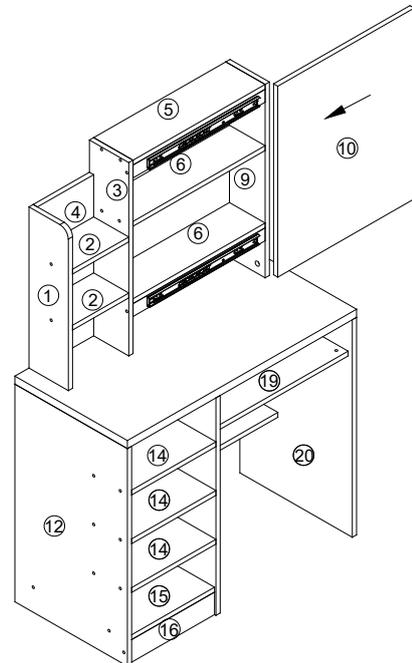


STEP 17

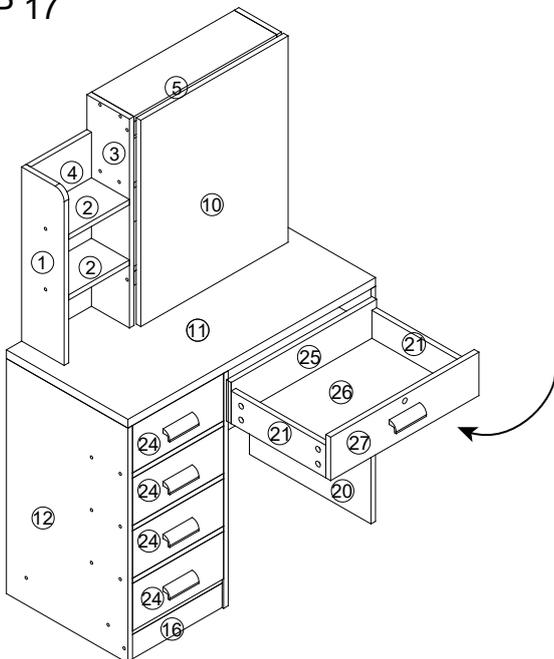

STEP 18

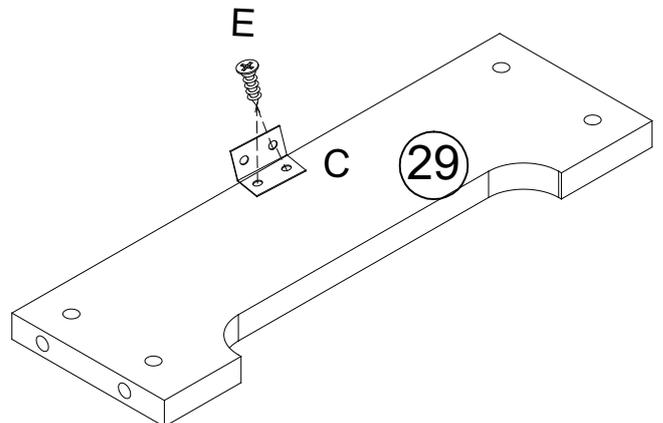

STEP 19

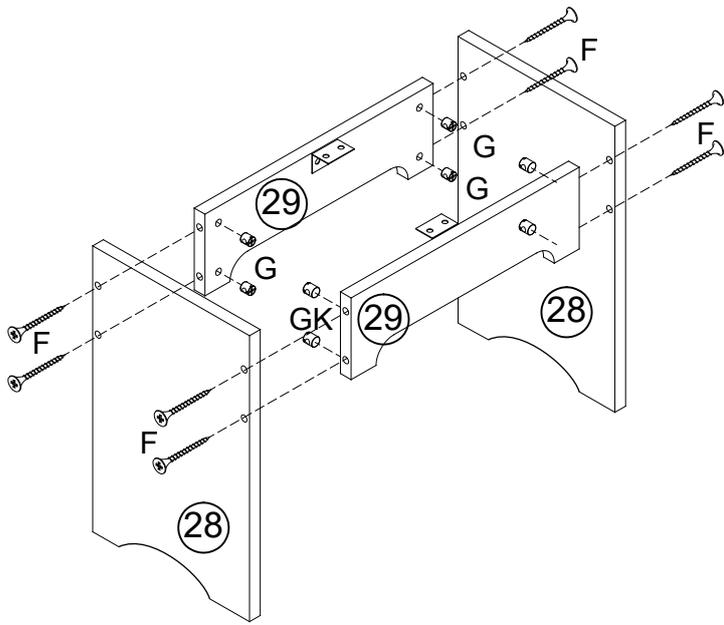

STEP 20

