

ASSEMBLY INSTRUCTION






Ax86



Bx86

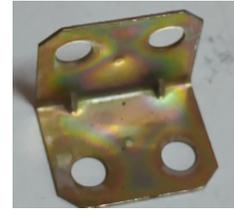

Cx2



Dx8



Ex46



Fx6



Gx1




Hx4




Jx8




Kx8

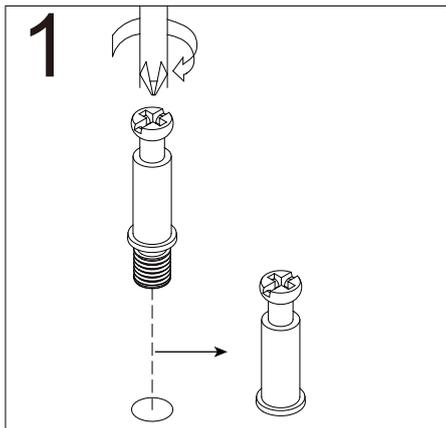


1

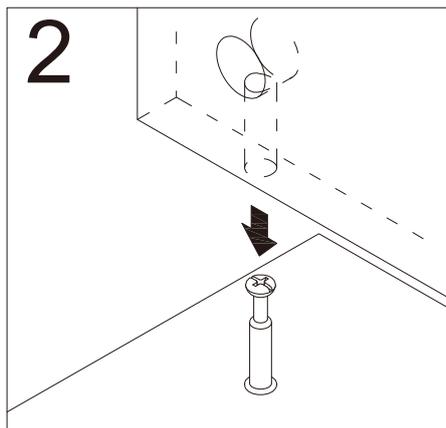


2

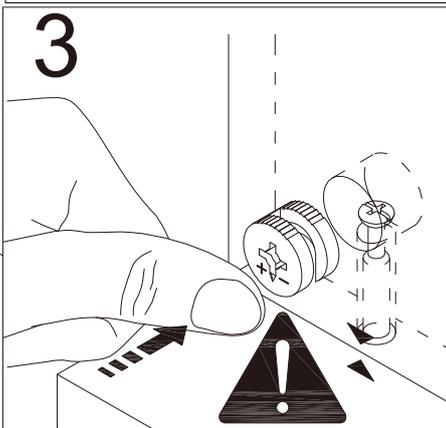



3

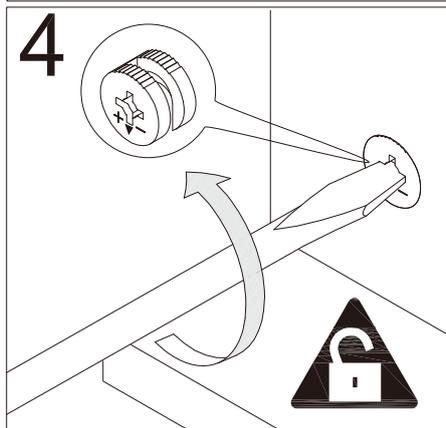


4

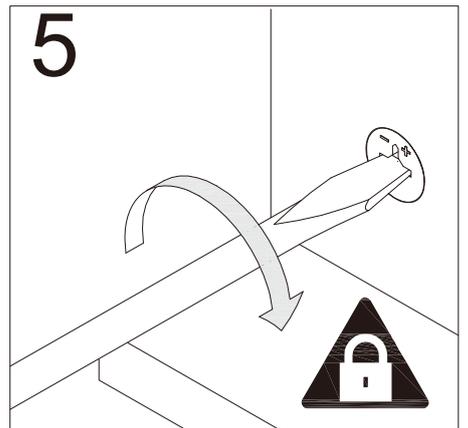


5

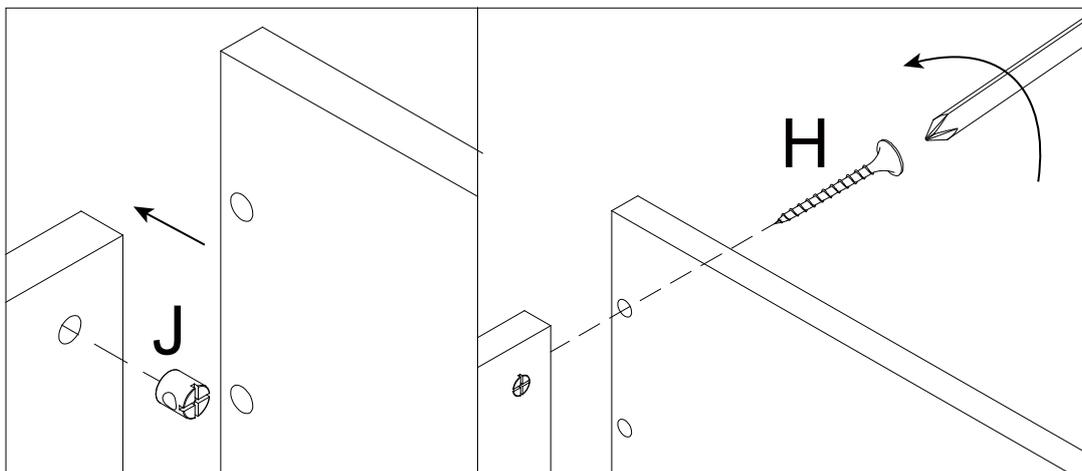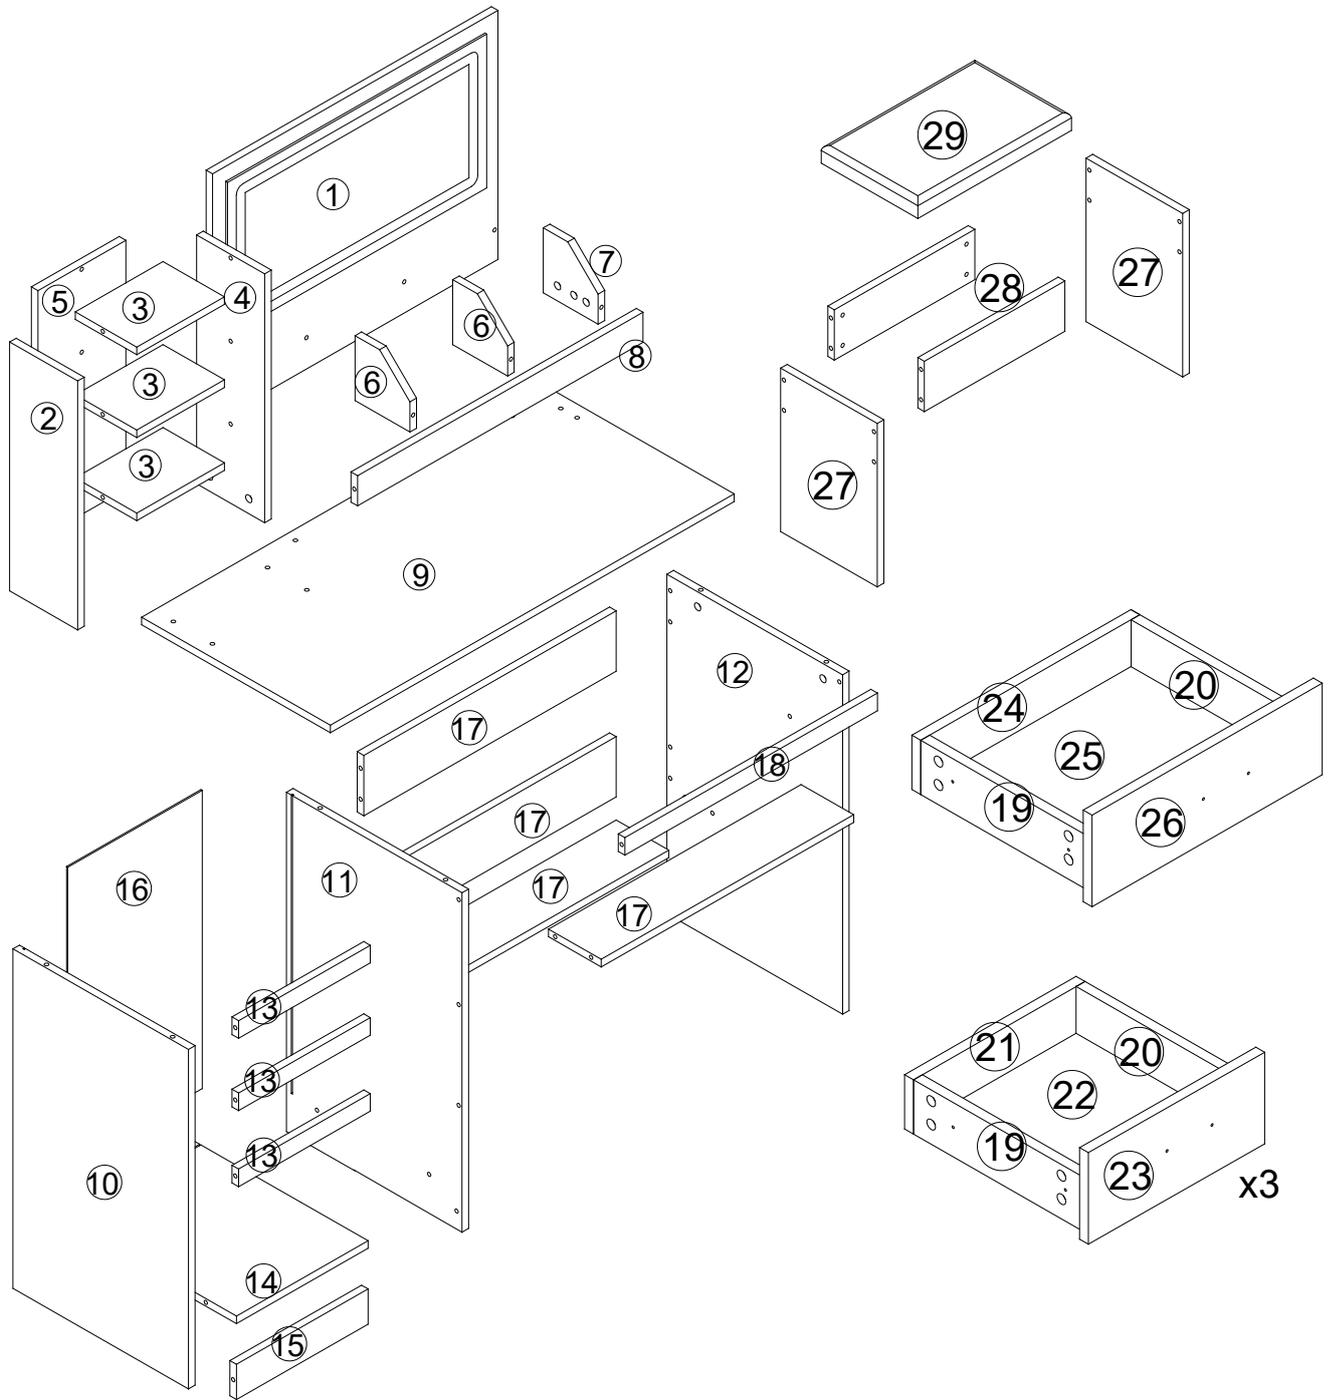


STEP 1

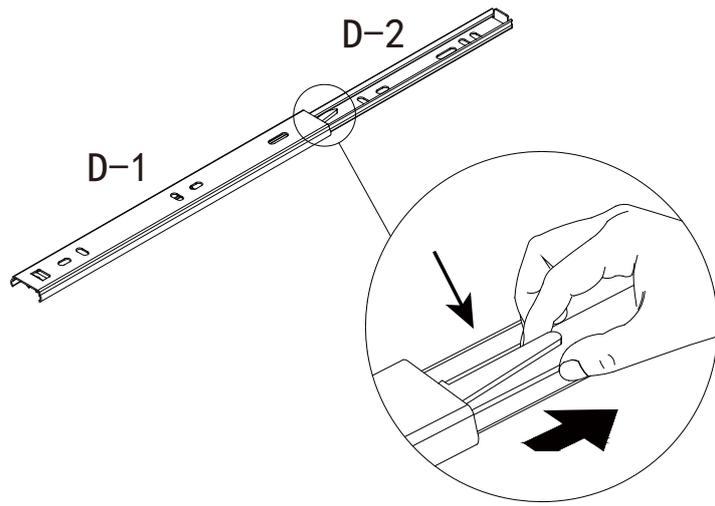


STEP 2

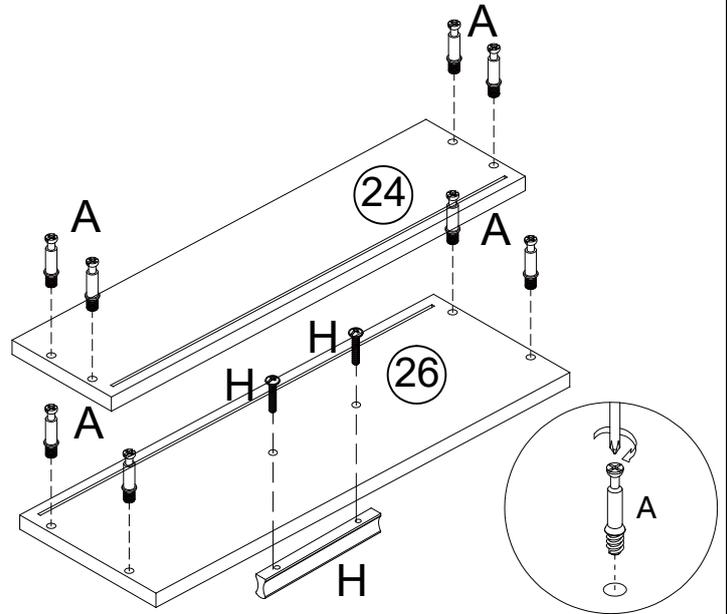

STEP 3

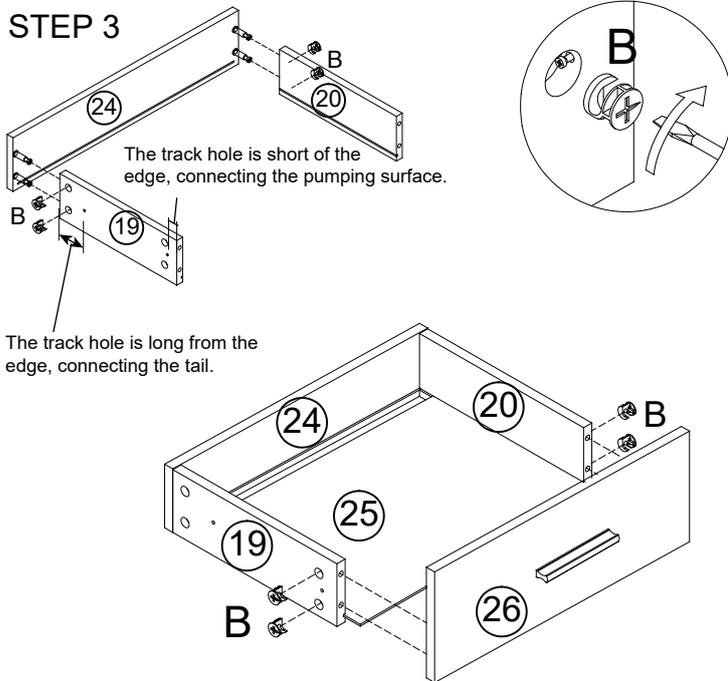


STEP 4

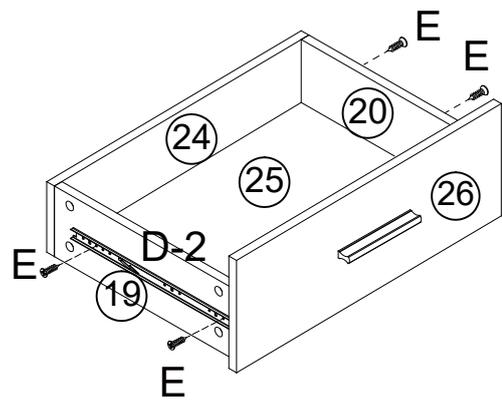


Three drawers are installed in the same way


STEP 5

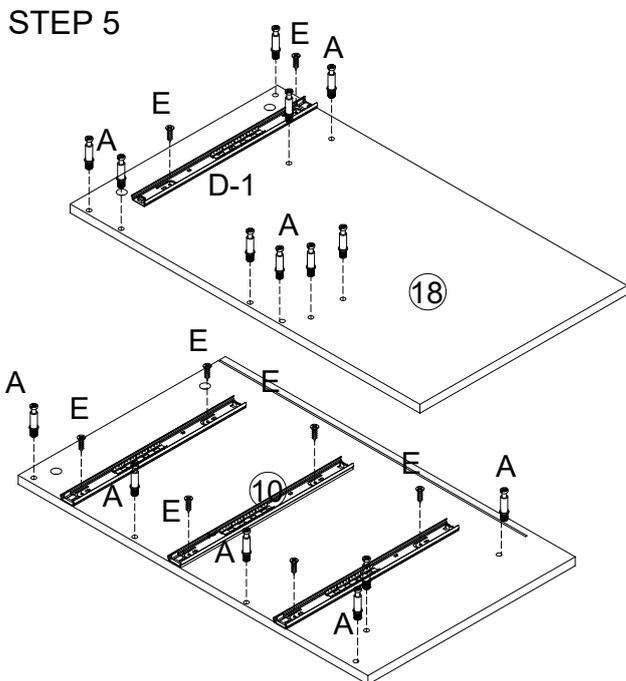


STEP 6

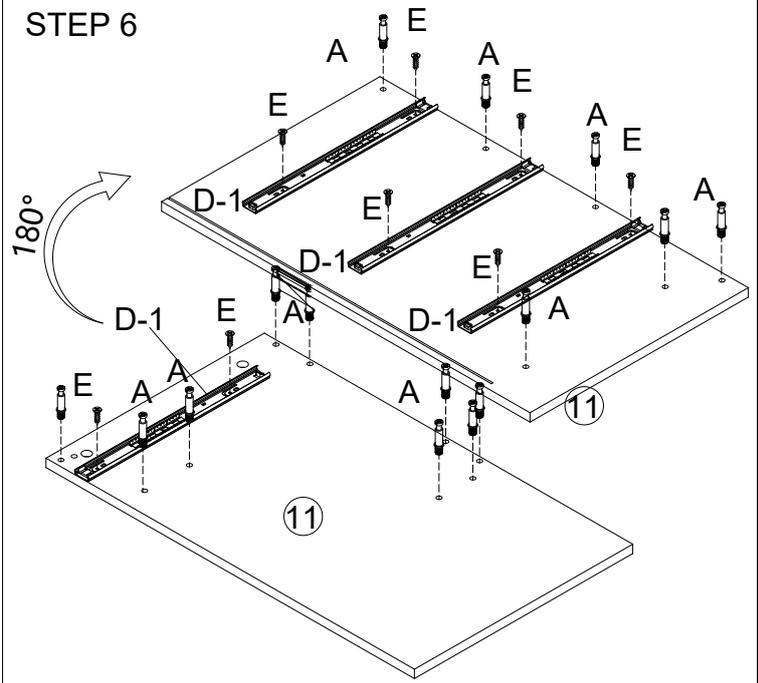


STEP 7

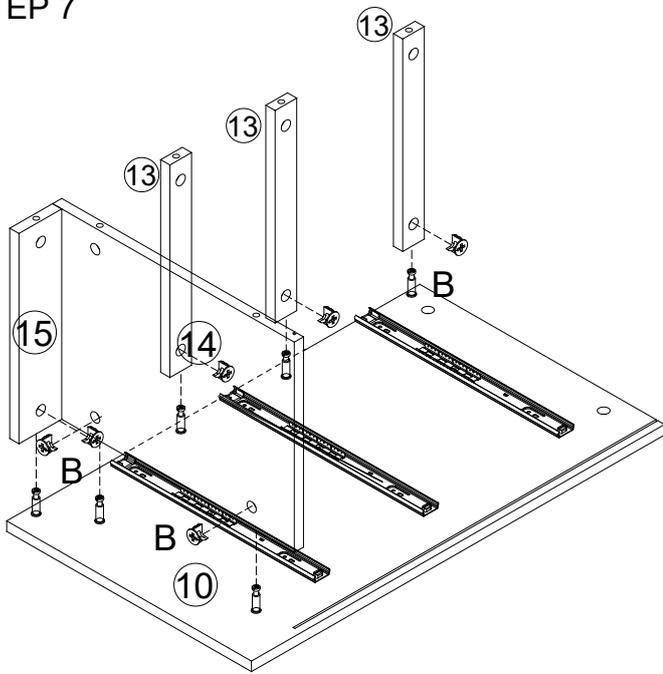


STEP 8

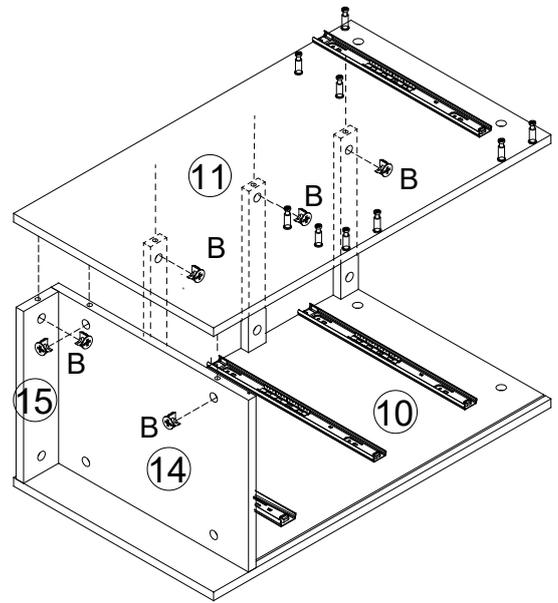


STEP 9

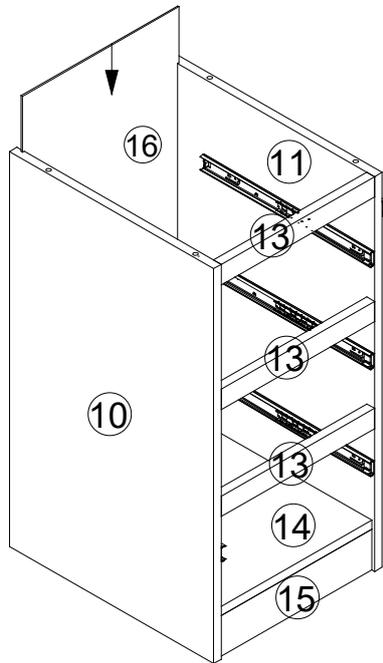


STEP 10

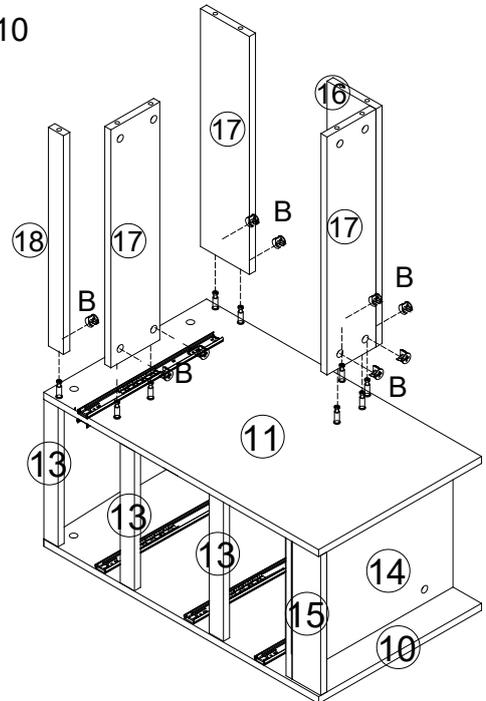


STEP 11

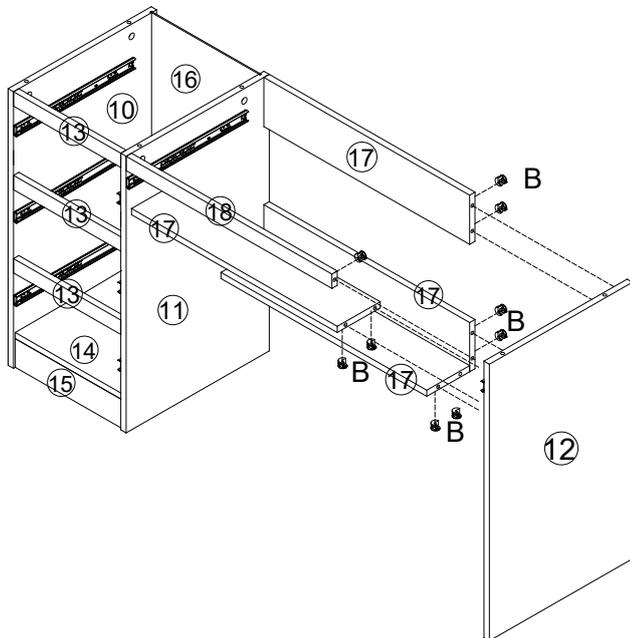


STEP 12

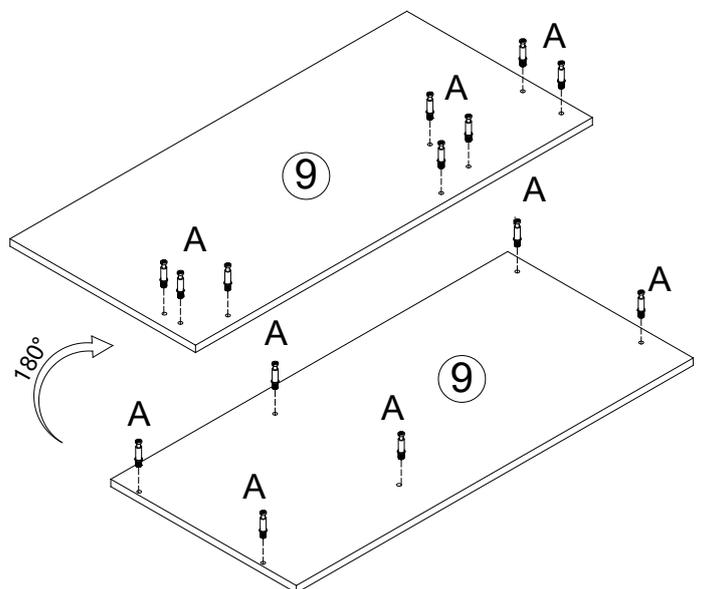


STEP 13

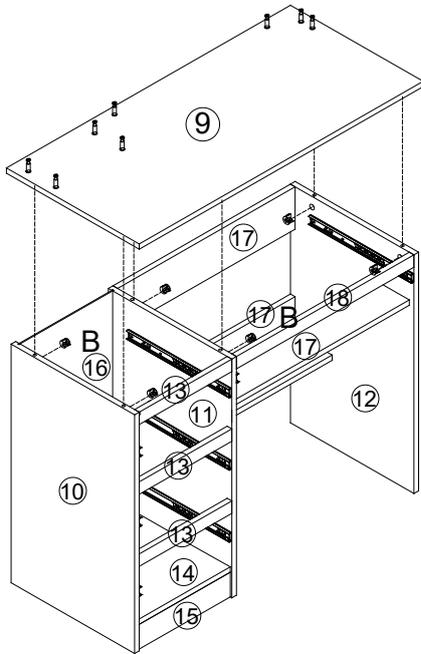


STEP 14

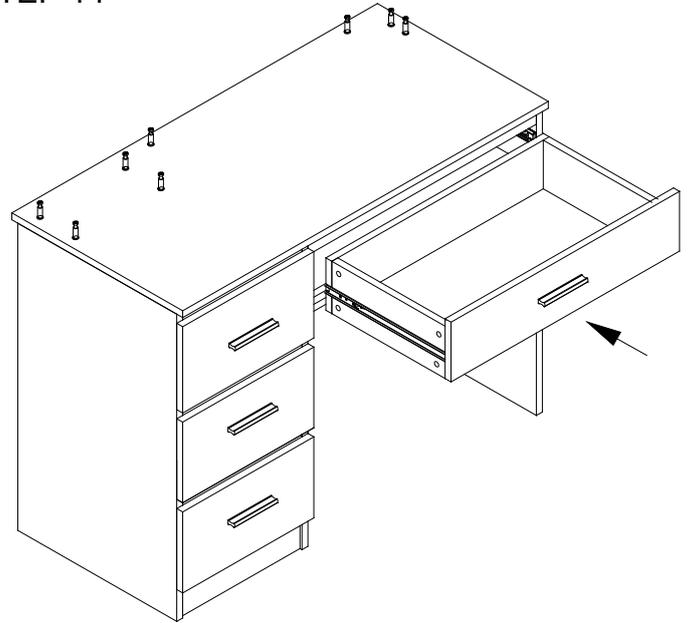


STEP 15

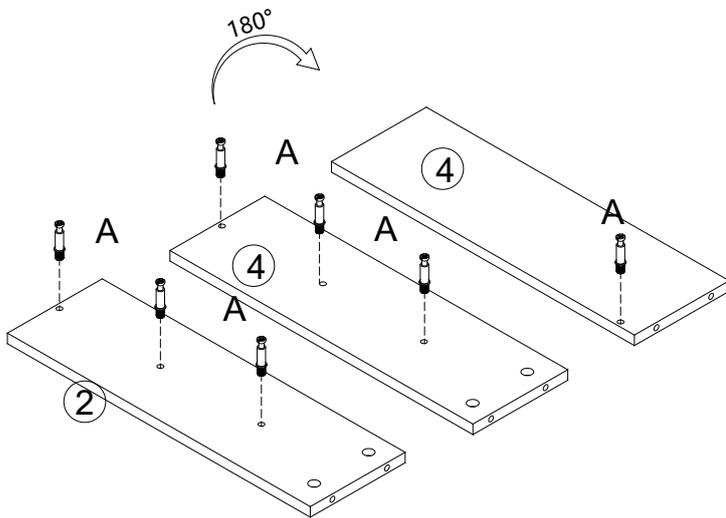


STEP 16

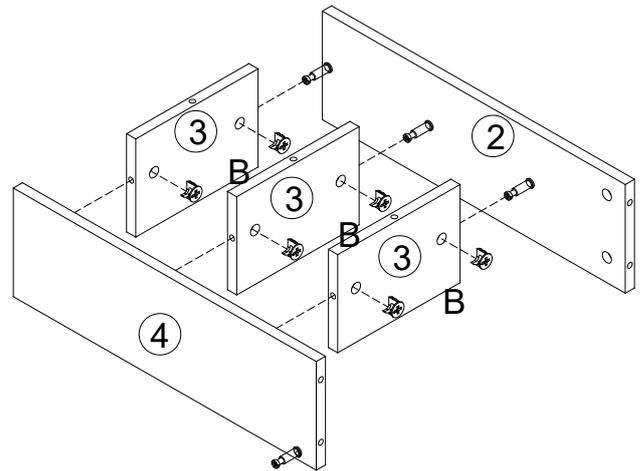


STEP 17

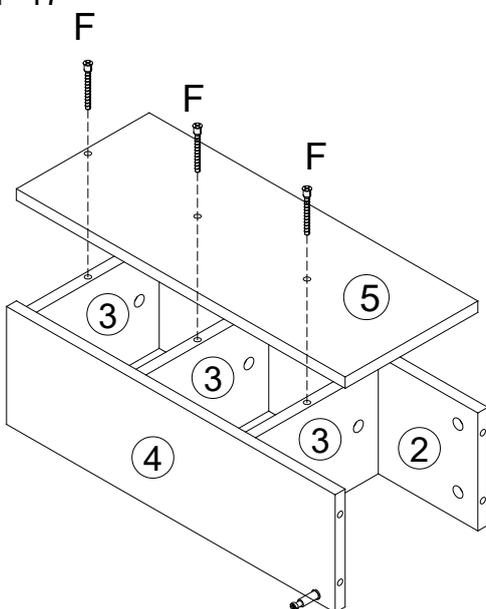


STEP 18

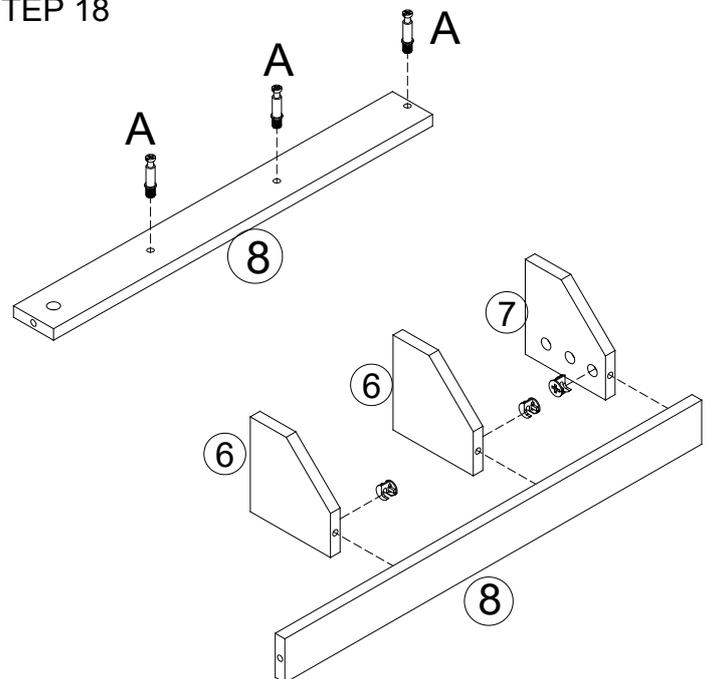


STEP 19

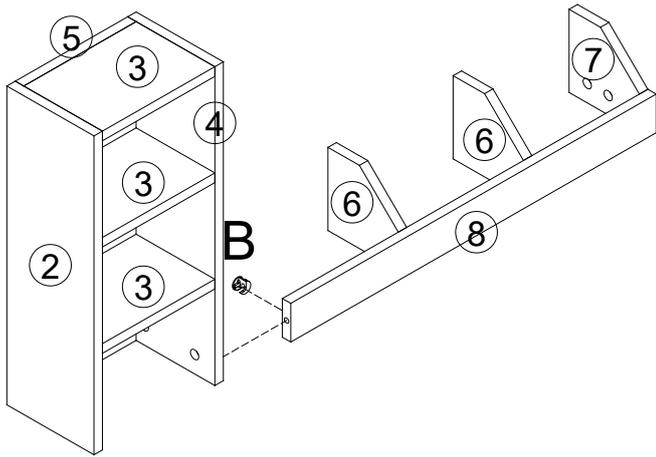


STEP 20

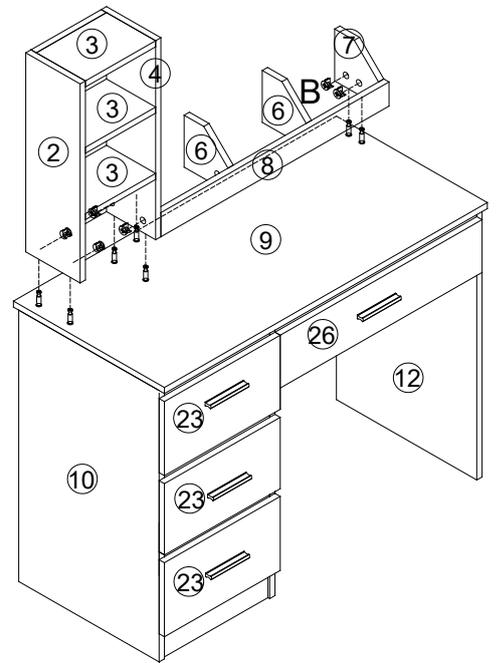

STEP 21

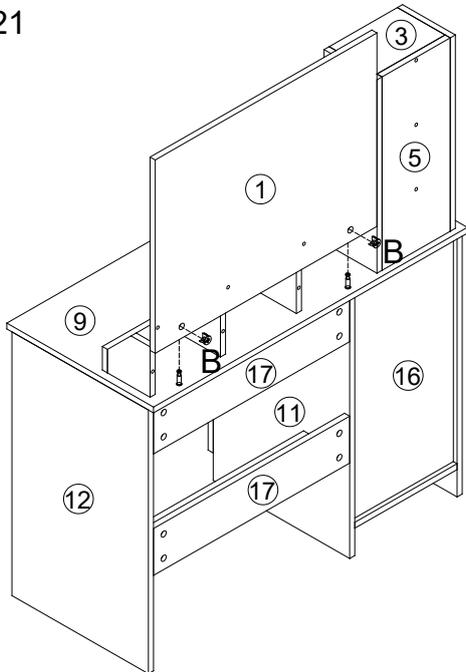

STEP 22

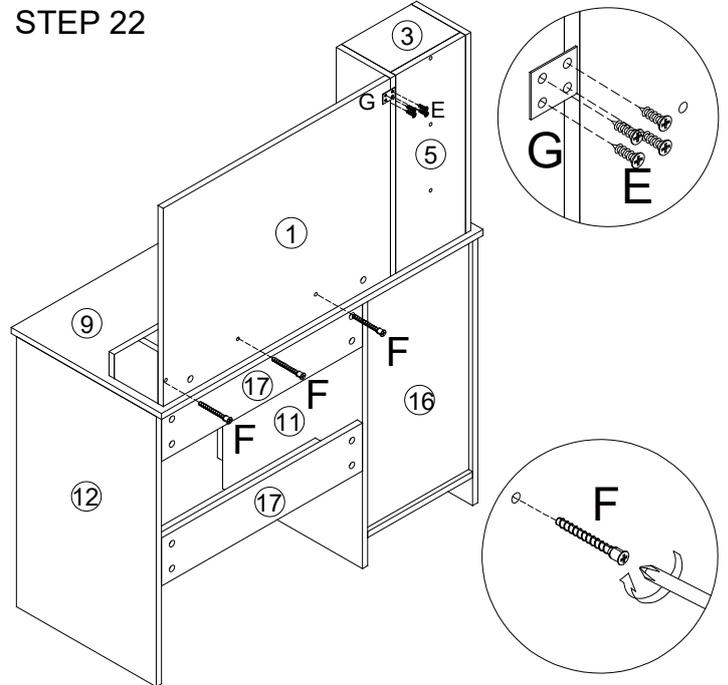

STEP 23

